 
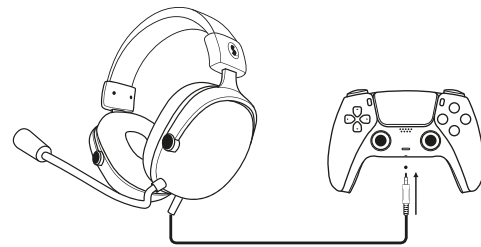 


## PS4/PS5™ SETUP CONFIGURATION POUR PLAYSTATION

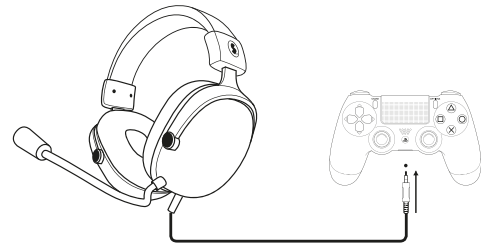

### PS4:

In order to hear the in-game audio through the headset, you must make sure that your ps4™ system is set-up as follows:

Settings > Devices > Audio Devices > Output to headphones > All audio

#### ADJUST THE HEADSET AUDIO LEVELS

the volume level of the headset and microphone can be adjusted within the PS4™ system menu as follows:

**HEADSET VOLUME:** Settings > Devices > Audio devices > Volume control (headphones)

**MICROPHONE LEVEL:** Settings > Devices > Audio devices > Adjust microphone level

(Adjust the microphone level until the indicator shows 'good')

### PS5:

Connect your wired headset to the 3.5mm port in the DualSense controller. Once you do this, the microphone function will automatically switch from the controller's integrated mic to your headset.

Go to Settings >> Sound >> Audio Output >> Output Device

Select Headset Connected To Controller for Output Device

Set Output to Headphones to **All Audio**

Go to Settings >> Sound >> Volume >> Headphones

 
Set Volume Control (headphones) level to Maximum

Adjust your microphone levels by going to Settings >> Sound >> Microphone >> Adjust Mic Level >> Microphone Level

Make sure your mic isnt muted. You will know your mic's in mute if you press the Mute button on your PS5 controller.

\*As desired, you can enable the 3D Audio function to enhance the audio through your headset. Go to Adjust 3D Audio Profile to select the best profile option for your game.

## NINTENDO SWITCH™ SETUP CONFIGURATION POUR NINTENDO SWITCH

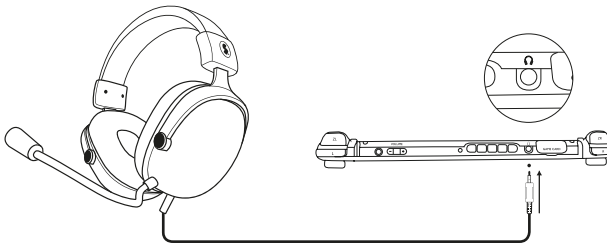

### EN:

Insert the headsets 3.5mm jack plug into your Nintendo Switch™ Console. The Headset should work upon connection . Chat available for games that support chat.

### FR:

Branchez la prise Jack de 3,5 mm du casque sur la console Nintendo Switch™.

### DE:

Verbinden Sie den 3,5-mm-Klinkenanschluss des Headsets mit der Nintendo Switch-Konsole.

### IT:

Branchez la prise Jack de 3,5 mm du casque sur la console Nintendo Switch™.

### ES:

Benchufe la clavija de conexión de 3,5 mm del casco a la consola Nintendo Switch™.

 
### NL:

Sluit de aansluiting van 3,5 mm van de headset aan op de Nintendo Switch™-console

### PT:

Inserir o conector de 3,5 mm dos auscultadores na consola da sua nintendo switch™.

## PC / MOBILE & TABLET CONFIGURATION POUR PC/ MOBILE ET TABLETTE

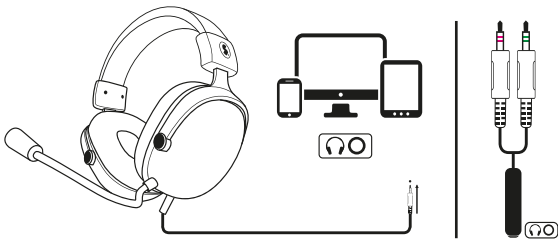

### WINDOWS:

Most new pc's have a single 3.5mm jack connection. Simply plug the 3.5mm jack from the headset directly into the port on your PC. The same applies when connecting to a mobile or tablet.

If your PC uses separate **Green/Pink** connectors you will need a PC Splitter Cable (**Sold Separately**)

On your Windows 10/11 PC, please click the **'Search'** icon on the bottom left hand side of your computer - normally looks like a magnifying glass icon

Type into the search bar **'Sound'** > **'Sound Settings'** should be presented as an option. Click this. Alternatively, press the **'Sound Icon'** in settings

Once you've done this, you should be taken to the following section, with the Audio Settings sitting first.

Select **'Headphones'** for **'Input'** and **'Output'**

And then as you scroll down, the Mic Settings sitting just below **'Device Properties'**

Finally to test whether all is good and whether your headset and mic is working correctly, proceed to the **'Test Your Microphone'** or **'Start Test'** option.

### MAC:

Simply plug the 3.5mm jack from the headset directly into the port on your Mac.

Go to **'System Settings'** and select **'Sound'**

Select **'Headphones'** on the **'Output'** tab

Select **'External Microphone'** on the **'Input'** tab

To test your microphone speak into the mic and you will see the **Input Level Sound Bar** moving to signify the mic is working. Also press the mute button on the headset to test the mute function, if the **Input Level Sound Bar** doesn't move then the mic mute is working properly on the headset.

You can adjust the Input and Output volume accordingly.

### Legal information

Please keep this instruction manual for future reference. If you require any help or assistance please contact us at [help@abptech.co.uk](mailto:help@abptech.co.uk)

### Warranty

This product is guaranteed for a period of one year from the date of purchase. During this period if there is a defect due to faulty materials, or workmanship the retailer from whom you purchased it will replace it with the same or a similar model on production of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

### Precautions

- Ensure that the volume control is set to the minimum level before connecting the headset to your system
- Before wearing the headset, set the volume control to its minimum level then slowly increase until you reach your desired volume level
- Listening to your headset at its maximum level may cause damage to both the headset and your ears
- Long term exposure to loud music or other sounds in a headset may cause hearing damage. It is best to avoid very high volume levels when using a headset, especially for extended periods

### Important Safeguards & Precautions

- Never expose to direct sunlight or wet weather conditions
- Do not expose the unit to splashing, dripping, rain or moisture. Do not immerse in liquid
- Do not expose to dust, high humidity, high temperatures or mechanical shock
- Avoid any unnecessary strain of the cable
- Do not carry the headset by its cable
- Do not use if the equipment is damaged
- Do not disassemble; there are no serviceable parts inside
- For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside

### Recycling



Where you see this symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in the EU or Turkey. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

The recycling and processing of Waste Electrical and Electronic Equipment will make a significant contribution towards helping protect the environment by reducing landfill waste.

Not recommended for children under 6 years of age.

MADE IN CHINA



Marking of this symbol indicates this product has been tested and is compliant with the EMC Directive of the European Union 2014/30/EU.



Marking of this symbol indicates this product conforms to Electromagnetic Compatibility Regulations 2016 issued by the UK.

Not recommended for children under 6 years of age. Please retain this packaging for future reference. Due to the company's policy of constant improvement and technical refinement, the company reserve the right to alter the specification. Actual product may differ from packaging imagery.

This product is not affiliated with, nor authorized, sponsored, or approved by; Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies. Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries and regions. Android name, logo, Google Play brand, and other Google trademarks, are property of Google LLC.

Manufactured By: ABP Technology Ltd. Bolton, UK, BL2 1BX.EU AR: ABP Technology Europe Ltd. Dublin, ROI, K78 X5W6. All Rights Reserved. MADE IN CHINA.

styletech

ONE SERIES

# Laptop & PC Headset

## QUICK START GUIDE GUIDE DE DÉMARRAGE RAPIDE

HAVING TROUBLE  
SETTING UP? WE CAN HELP!

TECHNICAL SUPPORT  
QUESTIONS / SET-UP / NOT WORKING?

How can we help? Our support  
team will answer your questions

EMAIL: [help@abptech.co.uk](mailto:help@abptech.co.uk)



PACKAGE CONTENTS  
CONTENU DE LA BOÎTE



ST-PC-H01 HEADSET


CONTROLS  
LES CONTRÔLES

1: MICROPHONE BUTTON



PRESS IN - MICROPHONE IS ACTIVE/ON  
PRESS OUT - MICROPHONE IS MUTED

2: MASTER VOLUME - GAME & CHAT

 NOTE: PLEASE MAKE SURE THE VOLUME IS TURNED UP AND THE MIC IS SWITCHED ON

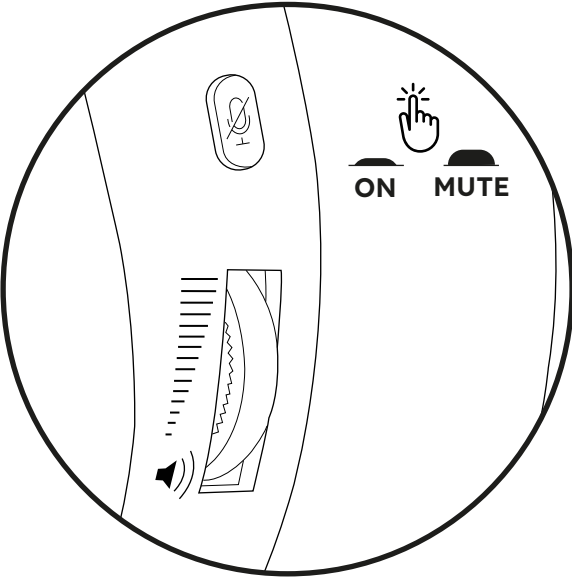

XBOX SETUP  
CONFIGURATION POUR XBOX

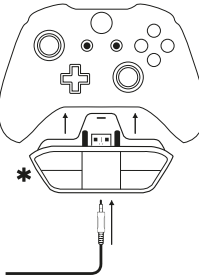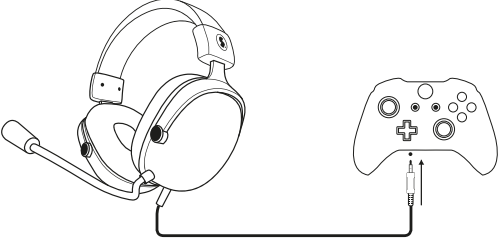  

NOTE: IF YOU ARE USING AN ORIGINAL XBOX ONE™ CONTROLLER YOU WILL REQUIRE THE \*XBOX ONE STEREO HEADSET ADAPTER (SOLD SEPARATELY)

NOTE: \*SI VOUS UTILISEZ UNE MANETTE D'ORIGINE XBOX™, VOUS AUREZ BESOIN D'UN ADAPTATEUR DE CASQUE DE JEU STÉRÉO XBOX ONE™ (VENDU SÉPARÉMENT)

XBOX SETUP  
HEADSET CHAT MIXER /  
CONFIGURATION POUR XBOX

EN:

- 1: Press the XBOX button on your controller
- 2: Access AUDIO settings by selecting the speaker icon along the bottom (Audio & Music)
- 3: Select Audio
- 4: Ensure the headset Mic is turned on
- 5: Set the Headset Volume to maximum
- 6: Set the Headset Chat Mixer to the middle
- 7: Set the Mic Monitoring to your desired level

FR:

- 1: Appuyez sur le bouton XBOX de votre manette
- 2: Accédez à l'onglet Système
- 3: Sélectionnez Audio
- 4: Assurez-vous que le micro du casque est activé
- 5: Réglez le volume du casque au maximum
- 6: Réglez le mélangeur de tchat du casque au milieu
- 7: Réglez le contrôle du micro au niveau souhaité

DE:

- 1: Drücke die Xbox-Taste deines Controllers
- 2: Navigiere zum Systemreiter
- 3: Wähle Audio
- 4: Stellen Sie sicher, dass das Headset-Mikrofon eingeschaltet ist
- 5: Stelle die Headset-Lautstärke auf des Maximum ein
- 6: Stelle die Chat-Abmischung des Headsets auf den mittleren Wert ein
- 7: Stelle den Mikromonitor auf deine bevorzugte Lautstärke ein

IT:

- 1: Premi il pulsante Xbox sul controller
- 2: Seleziona Sistema
- 3: Seleziona Audio
- 4: Assicurarsi che il microfono delle cuffie sia acceso
- 5: Imposta il volume delle cuffie al massimo
- 6: Configura il mixer per la chat delle cuffie al valore medio
- 7: Impostare il controllo microfono sul livello preferito

ES:

- 1: Pulsa el botón de Xbox en el mando
- 2: Ve a la pestaña Sistema
- 3: Selecciona Sonido
- 4: Asegúrese de que el micrófono del auricular esté encendido
- 5: Configura el volumen de los auriculares al máximo
- 6: Configura el mezclador de chat de los auriculares a la configuración intermedia
- 7: Configura el monitor de micrófono a tu nivel preferido

NL:

- 1: Druk op de Xbox-knop op je controller
- 2: Ga naar het tabblad System
- 3: Selecteer Audio
- 4: Zorg ervoor dat de Headset Mic is ingeschakeld
- 5: Stel Headset Volume in op Maximum
- 6: Stel Headset Chat Mixer in op de middelste instelling
- 7: Stel Mic Monitoring in op je gewenste niveau

PT:

- 1: Premir o Botao Xbox no comando
- 2: Selecionar o separador Sistema
- 3: Selecionar Audio
- 4: Verifique se o microfone do fone de ouvido está ligado
- 5: Colocar o volume dos auscultadores no maximo
- 6: Configurar o editor de som do chat dos auscultadores para a definicao do meio
- 7: Colocar a monitorizacao de microfone no nivel desejado

XBOX SETUP  
SURROUND SOUND /  
CONFIGURATION DU SON SURROUND

EN:

- 1: Press the XBOX button on your controller
- 2: Go to the Profile & System tab
- 3: Select Settings > General > Volume & Audio Output
- 4: Select headset to Windows Sonic for Headphones

FR:

- 1: Appuyez sur la touche Xbox de votre manette
- 2: Accédez à l'onglet Système
- 3: Ouvrez Paramètres > Affichage et son > Sortie audio
- 4: Paramétrez le format de casque sur Windows Sonic pour casque

DE:

- 1: Drücke die Xbox-Taste deines Controllers
- 2: Navigiere zum Systemreiter
- 3: Wähle Einstellungen > Anzeige & Sound > Audioausgabe
- 4: Wähle als Headset-Format "Windows Sonic for Headphones"

IT:

- 1: Premi il pulsante Xbox sul controller
- 2: Sezione Sistema
- 3: Impostazioni > Schermo e audio > Uscita audio
- 4: Imposta il formato su Windows Sonic per cuffie

ES:

- 1: Pulsa el botón de Xbox en el mando
- 2: Ve a la pestaña Sistema
- 3: Selecciona Configuración > Pantalla y sonido > Salida de sonido
- 4: Configura el formato de los auriculares a Windows Sonic para auriculares

NL:

- 1: Druk op de Xbox-knop op je controller
- 2: Ga naar het tabblad System
- 3: Selecteer Settings > Display & Sound > Audio Output
- 4: Stel Headset format in op Windows Sonic for Headphones

PT:

- 1: Premir o Botao Xbox no comando
- 2: Selecionar o separador Sistema
- 3: Selecionar Definições > Imagem e Som > Saída de Audio
- 4: Configurar o formato dos auscultadores em Windows Sonic para auscultadores